


ADAPTER H/C FOR TRV VALVE (5090.1114)

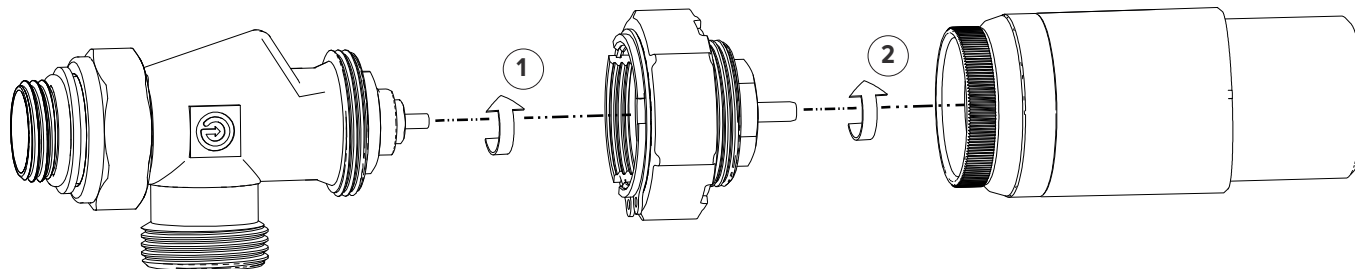

1. Mount adapter on valve M30x1.5 connection. Turn on firmly.
2. Turn TRV head on position 5 and mount on adapter.

