


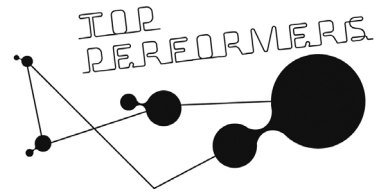



BRISE AC Built-In Wall (BRBW)

Montagehandleiding / Instructions de montage
Montagehinweis / Mounting instructions




Afmetingen / Dimensions / Abmessungen (cm)

TYPE	02	03	04	06	08	10
B		23.0				27.5
C			4.5			
D		15.3				22.5
E		45.5				46.3
F		25.5				26.0
G	55.7		83.2		110.7	138.2
H	57.5		85.2		112.7	140.2
K		9.0				9.5
L		19.8				24.0
M		28.0				31.5
N		48.0				

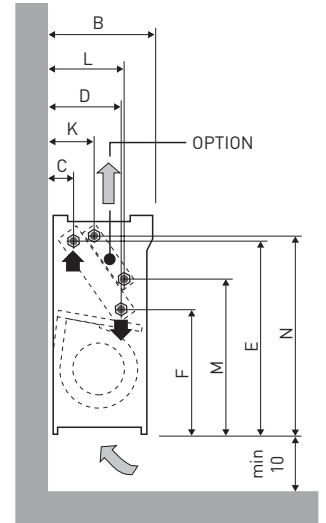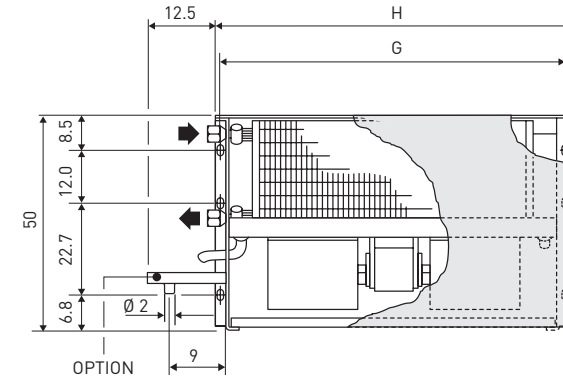


De warmtewisselaar is omkeerbaar (aansluiting rechts)
L'échangeur de chaleur est renversible (raccordement à droit)
Der Wärmetauscher ist umkehrbar (Anschluss rechts)
The heat exchanger is reversible (connection right)

Montage voeten / Montage des pieds Montage der Füße / Mounting the feet

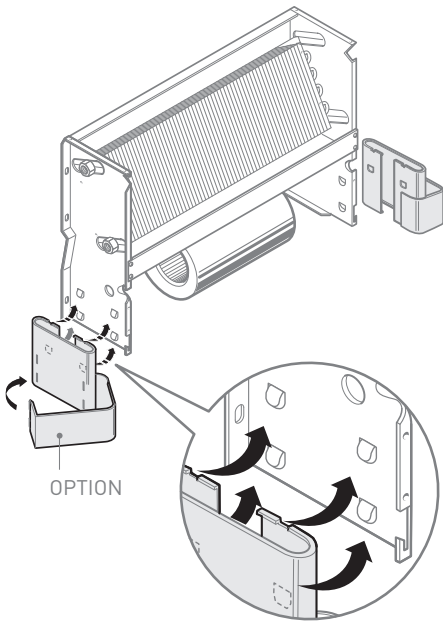


Filter uitnemen / Enlever le filtre - Filter entfernen - Taking out the filter


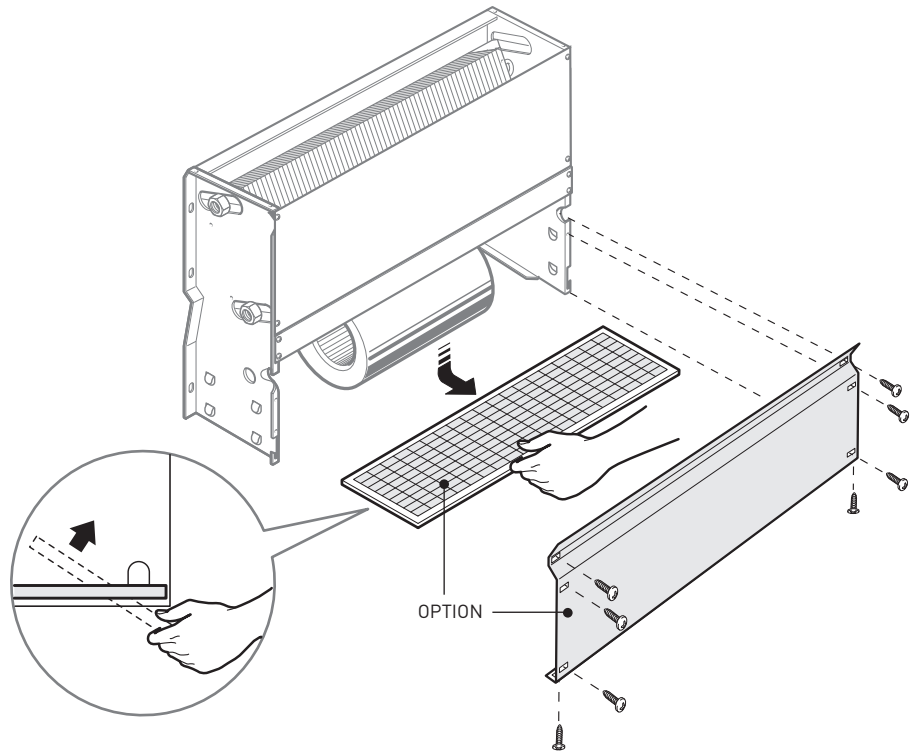


Afmetingen / Dimensions / Abmessungen (cm)

TYPE	02	03	04	06	08	10
B		23.0				27.5
C			4.5			
D		15.3				22.5
E		45.5				46.3
F		25.5				26.0
G	55.7		83.2		110.7	138.2
H	57.5		85.2		112.7	140.2
K		9.0				9.5
L		19.8				24.0
M		28.0				31.5
N			48.0			

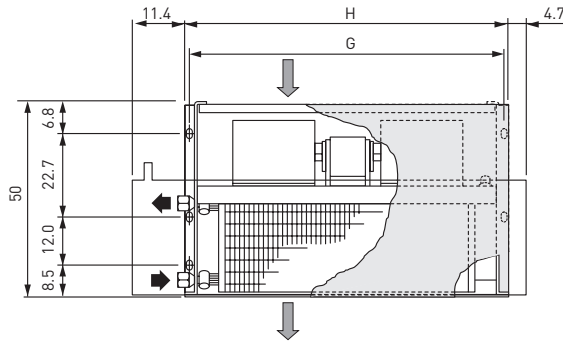

De warmtewisselaar is omkeerbaar (aansluiting rechts)
L'échangeur de chaleur est renversible (raccordement à droit)
Der Wärmetauscher ist umkehrbar (Anschluss rechts)
The heat exchanger is reversible (connection right)

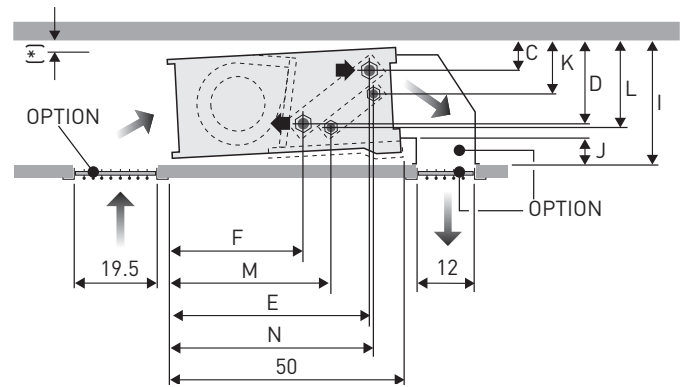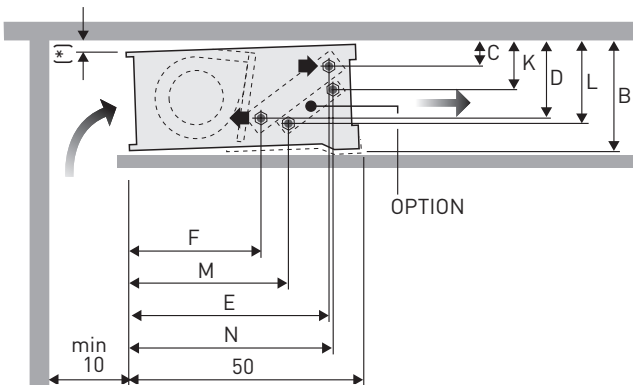

Filter uitnemen / Enlever le filtre - Filter entfernen - Taking out the filter

